

Camcorders, eBooks, Photo Frames and More

Green Text with Light Green Background indicates the adapter tip is included with Product.

Red Text with Clear Background indicates the adapter tip is sold separately.

N/A indicates that the adapter is not available or the Product is not compatible.

Amazon

Model	MP1550	MP1600	MP1650	MP1800	MP2250
Kindle	UA-L23	UA-L23	UA-L23	UA-L23	PA-L23
Kindle 2	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11

Barnes & Noble

Model	MP1550	MP1600	MP1650	MP1800	MP2250
Nook	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11

Kodak

Model	MP1550	MP1600	MP1650	MP1800	MP2250
Zi8 Pocket Video Camera	UA-L40	UA-L40	UA-L40	UA-L40	PA-L40
Photo Frame Dock	UA-L40	UA-L40	UA-L40	UA-L40	PA-L40
Photo Frame Dock 2	UA-L40	UA-L40	UA-L40	UA-L40	PA-L40

Sanyo

Model	MP1550	MP1600	MP1650	MP1800	MP2250
Xacti VPC-HD1010	UA-L40	UA-L40	UA-L40	UA-L40	PA-L40

Sony

Model	MP1550	MP1600	MP1650	MP1800	MP2250
Sony Reader	UA-L40	UA-L40	UA-L40	UA-L40	PA-L40