

MP3 and Portable Media Players

Green Text with Light Green Background indicates the adapter tip is included with Product.

Red Text with Clear Background indicates the adapter tip is sold separately.

N/A indicates that the adapter is not available or the Product is not compatible.

Apple

Model	MP1550	MP1600	MP1650	MP1800	MP2250
1G iPod, 2G iPod, 3G iPod	n/a	n/a	n/a	n/a	n/a
iPod mini, 4G iPod, iPod photo, iPod nano, 5G iPod, 2G nano	iPod USB	iPod USB	iPod USB	iPod USB	n/a
iPod shuffle, iPod shuffle 2G	iPod USB	iPod USB	iPod USB	iPod USB	n/a
iPod classic 80G/120G/160G, nano 3G, nano 4G	iPod USB	iPod USB	n/a	iPod USB	n/a
iPod touch, iPod touch 2G, iPhone, iPhone 3G, iPhone 3G S	iPod USB	iPod USB	iPod USB	iPod USB	n/a

Archos

Model	MP1550	MP1600	MP1650	MP1800	MP2250
Archos: 104, 105, 204	Archos USB	Archos USB	Archos USB	Archos USB	UA-USB
Archos: 404, 404 Camcorder, 405, 504	Archos USB	Archos USB	Archos USB	Archos USB	UA-USB
Archos: 604, 604 WiFi, 605 WiFi	Archos USB	Archos USB	Archos USB	Archos USB	UA-USB
Archos 5, 7	Archos USB	Archos USB	Archos USB	Archos USB	UA-USB

Creative

Model	MP1550	MP1600	MP1650	MP1800	MP2250
ZEN Micro, ZEN MicroPhoto	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03

Microsoft

Model	MP1550	MP1600	MP1650	MP1800	MP2250
Zune: 4GB, 8GB, 30GB, 80GB	Microsoft USB	Microsoft USB	Microsoft USB	Microsoft USB	UA-USB

SanDisk

Model	MP1550	MP1600	MP1650	MP1800	MP2250
Sansa: c200, e200	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
Sansa: Connect, Fuze, View	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03