

## Mobile Phones

Green Text with Light Green Background indicates the adapter tip is included with Product.

Red Text with Clear Background indicates the adapter tip is sold separately.

N/A indicates that the adapter is not available or the Product is not compatible.

### Apple

Model	MP1550	MP1600	MP1650	MP1800	MP2250
iPhone, iPhone 3G, iPhone 3G S	iPod USB	iPod USB	iPod USB	iPod USB	n/a

### Blackberry

Model	MP1550	MP1600	MP1650	MP1800	MP2250
6210, 6220, 6230, 6280, 6510	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
7000i, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130c, 7130e, 7130g, 7130v,	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
8700c, 8700f, 8700g, 8700r, 8700v, 8703e, 8705g, 8707g, 8707h, 8707v, 8800, 8820, 8830	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
Curve 8300, 8310, 8320, 8330, 8350	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
Pearl 8100, 8100c, 8110, 8120, 8130	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
Bold 9000	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
Bold 9700, Curve 8530, Curve 8900	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
Pearl 8220, Storm 9530, Storm 2, Tour 9630	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11

### HTC

Model	MP1550	MP1600	MP1650	MP1800	MP2250
Droid Eris	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
G1 (with Google)	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
Mogul	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
P3300, P3470, P3600, P4350, P6300, P6500	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
PPC-6700	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
S310, S620, S710, S730	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
Touch, Touch Viva, Tytan II	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
Touch Pro	HTC Cable	HTC Cable	HTC Cable	HTC Cable	HTC Cable

### LG

Model	MP1550	MP1600	MP1650	MP1800	MP2250
AX260, AX275, AX380, AX565, AX8600	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4
AX300, AX830 (Glimmer)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
CE110, CG180	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4
CT810 (Incite)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
CU515, CU575, CU720 Shine, CU915, CU915 Vu, CU920, CU920 Vu-TV	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4
LG830 (Spyder)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
LX150, LX160, LX165, LX260, LX570	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4
LX400, LX600 (Lotus)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
UX260, UX380	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4
UX300, UX585 (Rhythm), UX830 (Glimmer)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
VX5400, VX8350, VX8550 (Chocolate 2), VX8600, VX8700, VX8800, VX9400, VX10000 Voyager	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4
VX8560 (Chocolate 3), VX8610 (Decoy), VX9100 (enV2), VX9600 (Versa), VX9700 (Dare)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
CHOCOLATE, EnV, Muziq, Rumor, Scoop, Shine, TRAX, WAVE	UA-LG4	UA-LG4	UA-LG4	UA-LG4	UA-LG4

<b>Motorola</b>					
Model	MP1550	MP1600	MP1650	MP1800	MP2250
A630, A760, A830, A835, A845, A925, A1000	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1
A1200, C290, E770	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
BARRAGE, Crush, DEVOUR, DROID, Evoke QA4, Hint QA30, Karma QA1, Quantico, Rival A455	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
E815, E816, E1000	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1
ic402, ic402 The Blend, ic502 The Buzz, ic602 The Buzz+, ic902 The Deluxe	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
i30sx i50sx i55sr i58sr i60c i85s i88s i90c i95cl i99cl	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1
i335	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
i205, i265, i275, i305, i315, i325, i325is, i355, i530, i560, i580, i605, i615, i670, i710, i730, i733, i760, i830, i836, i850, i860, i870, i880, i920, i930	UA-NEX1	UA-NEX1	UA-NEX1	UA-NEX1	UA-NEX1
i410, Clutch i465, Brute i680, DEBUT i856, Stature i9	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
KRZR, KRZR K1, KRZR K1m	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
MOTO Q, MOTO Q9m	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
MOTO Q9, MOTO Q9h, MOTO Q Global, MOTO VE440	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
MOTOROLA BACKFLIP, CLIQ, CLIQ XT	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
PEBL U6	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
RAZR V3, RAZR V3C, RAZR V3i, RAZR V3m, RAZR V3r, RAZR V3t, RAZR V3xx, RAZR Maxx Ve, RIZR Z3, RIZR Z3tv	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
RAZR2 V8, RAZR2 V9, RAZR2 V9m, ROKR U9	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
ROKR E1, ROKR E2, ROKR E6, ROKR Z6, ROKR Z6m	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
SLVR L2, SLVR L6, SLVR L7, SLVR L7c	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
V60, V60c, V60g, V60i, V60t, V66, V70, V80, V120, V120C	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1
V200, V260, V262, V265, V276, V300, V330, V400,	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1
V500, V525, V540, V547, V551, V600, V620, V635, V710, V810	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1
V190, V195, V235, V323, V323i, V325, V360, V365, V557	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
W315, W370, W385, W490, W510	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
Entice W766, Z9	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
<b>Bluetooth Headsets</b>					
H3, H350, H500, H605, H670, H700	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
HS801, HS810, HS820, HS830, HS850	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1	UA-MOTO1
H710	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
<b>Nokia</b>					
Model	MP1550	MP1600	MP1650	MP1800	MP2250
E50, E51, E61, E61i, E62, E65, E90	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2
E75	UA-U12	UA-U12	UA-U12	UA-U12	UA-U12
N70, N71, N72, N73, N75, N76, N77, N80, N81, N90, N91, N92, N93, N93i, N95	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2
N85, N86, N97	UA-U12	UA-U12	UA-U12	UA-U12	UA-U12
N800, N810 Internet Tablet	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2
N900	UA-U12	UA-U12	UA-U12	UA-U12	UA-U12
1100, 1221, 1260, 1261	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1
1650	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2
2116i, 2125i, 2128i, 2220, 2260, 2270, 2280, 2285, 2600, 2610, 2651	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1
2630, 2760, 3109, 3110, 3250, 3500	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2
3100, 3120, 3200, 3205, 3220, 3280, 3285, 3300, 3320, 3360, 3361, 3390, 3395, 3520, 3560, 3570, 3585, 3585i, 3586i, 3587i, 3588i, 3589i, 3590, 3595, 3600, 3620, 3650, 3660	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1
5070, 5200, 5300 XpressMusic, 5500 Sport, 5700 XpressMusic	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2
5100, 5110, 5120, 5125, 5130, 5140, 5160, 5165, 5170, 5170i, 5180, 5180i, 5185, 5185i, 5190, 5192	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1
6010, 6015, 6015i, 6016i, 6019i, 6020, 6030, 6061, 6100, 6110, 6120, 6130, 6150, 6160, 6160i, 6161, 6162, 6168, 6170, 6180, 6185, 6185i, 6190, 6192, 6200, 6225, 6230, 6235, 6235i, 6236, 6236i, 6255i, 6256i, 6310i, 6340, 6340i, 6360, 6370, 6385, 6390	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1
6070, 6080, 6085, 6086, 6101, 6102i, 6103, 6110, 6111, 6120, 6121, 6125, 6126, 6131, 6136, 6151, 6233, 6270, 6280, 6290, 6300, 6301, 6500, 6555	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2
6510, 6560, 6585, 6590, 6590i, 6600, 6610, 6620, 6651, 6670, 6681, 6682, 6800, 6820, 6820i	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1
7110, 7160, 7190, 7210, 7250, 7250i, 7380, 7610	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1
7360, 7370, 7373, 7390, 7500 Prism	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2	UA-NOK2
8260, 8265, 8265i, 8270, 8290, 8290i, 8310, 8390, 8800, 8801, 8810, 8860, 8890, 9300, 9300i, 9500	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1	UA-NOK1
6205, 6500 (Classic), 7205 (Intrigue), 7900 (Prism), 8600 (Luna), 8800 (Arte / Sapphire Arte)	UA-U12	UA-U12	UA-U12	UA-U12	UA-U12

## Palm

Model	MP1550	MP1600	MP1650	MP1800	MP2250
Centro	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2
Palm Pixi, Palm Pixi Plus, Palm Pre, Palm Pre Plus	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
Treo 650, Treo 680, Treo 700p, Treo 700w, Treo 700wx, Treo 750, Treo 755p	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2
Treo 800w, Treo Pro	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11

## Samsung

Model	MP1550	MP1600	MP1650	MP1800	MP2250
a117, a127, a137, a167, a177, a226, a227, a237, a257 (Magnet)	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7
a303 (Heat), a436, a437, a503, a707, a717, a727	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3
a310, a517, a513 (Fin), a523 (Mysto), a637, a657, a737, a747 (SLM), a767 (Propel), a777, a827 (Access), a837 (Rugby), a867 (Eternity), a877 (Impression), a887 (Solstice)	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7
a570, a630, a645, a840, a850, a870, a890, a900, a920, a930, a990	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1
a797 (Flight), a897 (Mythic)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
c225, c417, d370, d347, d415	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1
d806, d807, d900 (BlackCarbon), e878	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3
e105, e315, e316, e317, e335, e715	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1
i220, (Code), i350 (Intrepid), i920 (Omnia II)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
i325 (Ace), i617 (BlackJack II), i627 (Propel Pro), i637 (Jack), i770 (Saga), i907 (Epix), i910 (Omnia)	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7
i607 (BlackJack), m610, m620 (UpStage)	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3
m220, m240, m320, m330, m540 (Rant), m550 (Exclaim), m560 (Reclaim), m630 (Highnote), m850 (Instinct HD), m900 (Moment)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
m300, m305, m310 (Slash), m340 (Mantra), m510, m520, m800 (Instinct), m810 (Instinct s30)	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7
n330, n625, p107, p207	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1
r100 (Stunt), r350/r351 (Freeform), r460 (MyShot II), r470 (TwoStep), r560 (Messenger II), r850 (Caliber)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
r200, r210 (Spex), r211, r300, r310 (Byline), r311 (Axle), r410, r420 (Tint), r430 (MyShot), r450 (Messenger), r451C, r500 (Hue), r520 (Trill), r600 (Hue II), r610, r800 (Delve), r810 (Finesse)	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7
r225, s307, t309	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1
r510, t219, t329, t509, t519 (Trace), t629, t809	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3
t101G, t109, t119, t139, t229, t239, t301G, t339, t349, t401G, t409, t429, t439, t459 (Gravity), t469 (Gravity 2), t539 (Beat), t559 (Comeback), t639, t659, t729 (Blast), t739 (Katalyst), t749 (Highlight), t819, t919 (Behold), t929 (Memoir)	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7
t939 (Behold II)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
u310 (Knack), u350 (Smooth), u430, u440 (Gloss), u450 (Intensity), u470 (Juke), u490 (Trance), u640 (Convoy), u650 (Sway)	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7
u340, u410, u520, u540, u550, u620	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1
u420, u740	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3	UA-SAM3
u700 (Gleam), u706 (Muse), u750 (Alias 2), u810 (Renown), u900 (FlipShot), u940 (Glyde), u960 (Rogue)	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7
v205, v206, x105, x426, x426M, x427, x427M, x475, x495, x496, x497	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1	UA-SAM1
z400	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7	UA-SAM7

## Sanyo

Model	MP1550	MP1600	MP1650	MP1800	MP2250
Katana, Katana II, Katana DLX	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1
M1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1
MM-5600, MM-7400, MM-7500, MM-8300, MM-9000	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1
PM-8200	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1
RL-2000, RL-2500, RL-4920, RL-4930, RL-7300	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1
S1	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
SCP-2400, SCP-3100, SCP-3200	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1
SCP-3800 (Katana LX)	UA-U11	UA-U11	UA-U11	UA-U11	UA-U11
SCP-4900, SCP-4920, SCP-4930	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1
SCP-5300, SCP-5400, SCP-5600, SCP-6650	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1
SCP-7000, SCP-7050, SCP-7200, SCP-7300, SCP-7400, SCP-7500	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1
SCP-8100, SCP-8200, SCP-8300, SCP-8400, SCP-8500, SCP-9000	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1
VM-4500	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1	UA-SAN1

## Sony Ericsson

Model	MP1550	MP1600	MP1650	MP1800	MP2250
C702a, C902, C905	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
F305	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
G700, G705, G705u	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
J100i, J110i, J120i, J220i, J230i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
K200i, K220i, K310i, K320i, K330, K510i, K530i, K550i, K550im, K610i, K610im, K750i, K770i, K800i, K810i, K850i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
K700	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1
M600i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
P1i, P990i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
P800, P802, P900	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1
R380	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1
S302, S500i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
S700	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1
T226, T237, T310, T316, T610, T616, T618, T628, T630, T637	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1
T250i, T303, T650i, T700	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
V630i, V640i	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
W200a, W200i, W300i, W302, W380i, W580i, W595, W600, W610i, W660i, W700i, W705, W710i, W712a, W800, W810i, W850i, W880i, W900i, W902, W910i, W950i, W960i, W980	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
Z310a, Z310i, Z320i, Z520a, Z525a, Z530i, Z550a, Z610i, Z710i, Z750a	UA-SE2	UA-SE2	UA-SE2	UA-SE2	UA-SE2
Z200, Z500, Z600	UA-SE1	UA-SE1	UA-SE1	UA-SE1	UA-SE1

## T-Mobile

Model	MP1550	MP1600	MP1650	MP1800	MP2250
G1 (with Google)	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03