

## PDA, GPS and Handheld Games

Green Text with Light Green Background indicates the adapter tip is included with Product.

Red Text with Clear Background indicates the adapter tip is sold separately.

N/A indicates that the adapter is not available or the Product is not compatible.

### Casio

Model	MP1550	MP1600	MP1650	MP1800	MP2250	Additional Info
IT-10	UA-L40	UA-L40	UA-L40	UA-L40	UA-L40	

### Garmin

Model	MP1550	MP1600	MP1650	MP1800	MP2250	Additional Info
Edge: 605, 705	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
nuvi: 200, 200W, 205, 205W, 250, 250W, 255, 255W, 260, 270	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
nuvi: 300, 310, 350, 360, 370	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
nuvi: 610, 650, 660, 670, 680	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
nuvi: 710, 750, 760, 770, 780	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
nuvi: 850, 880	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	
StreetPilot: i2, i3, i5	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04	

### HTC

Model	MP1550	MP1600	MP1650	MP1800	MP2250	Additional Info
P3300, P3470, P3600, P4350, P6300, P6500	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
S310, S620, S710, S730	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
Tytn II	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	

### Magellan

Model	MP1550	MP1600	MP1650	MP1800	MP2250	Additional Info
Maestro 3100, 3140, 4000, 4040, 4050, 4100	PA-L30	PA-L30	PA-L30	PA-L30	PA-L30	MP1800-10 needed to connect adapter to USB port
Roadmate 800, 860, 2000, 2200T, 3000T, 3050T, 6000	PA-L30	PA-L30	PA-L30	PA-L30	PA-L30	MP1800-10 needed to connect adapter to USB port

### Navigon

Model	MP1550	MP1600	MP1650	MP1800	MP2250	Additional Info
Navigon 5100	n/a	UA-U04	UA-U04	UA-U04	UA-U04	

### Nintendo

Model	MP1550	MP1600	MP1650	MP1800	MP2250	Additional Info
DS, Gameboy Advanced, Gameboy SP	UA-NIN1	UA-NIN1	UA-NIN1	UA-NIN1	UA-NIN1	
DS Lite	UA-NIN3	UA-NIN3	UA-NIN3	UA-NIN3	UA-NIN3	

### Palm

Model	MP1550	MP1600	MP1650	MP1800	MP2250	Additional Info
m125, m130, m500, m505, m515	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	
LifeDrive	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	
Tungsten C	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	
Tungsten E2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	
Tungsten T, Tungsten T2, Tungsten T3	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	
Tungsten T5	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	
Tungsten W	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	
TX	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	
Zire 71	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	

### Sony

Model	MP1550	MP1600	MP1650	MP1800	MP2250	Additional Info
PSP	UA-L40	UA-L40	UA-L40	UA-L40	UA-L40	

### TomTom

Model	MP1550	MP1600	MP1650	MP1800	MP2250	Additional Info
GO: 520, 720, 730	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
GO: 920, 930, 930 T	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
XL, XL S, XL 30, XL 330, XL 330 S	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
ONE: 2nd Edition, 30 Series, 3rd Edition	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	