

Portable DVD Players

Green Text with Light Green Background indicates the adapter tip is included with Product.

Red Text with Clear Background indicates the adapter tip is sold separately.

N/A indicates that the adapter is not available or the Product is not compatible.

* MP3450i requires PA-L34 or PA-S34 (not included in original package) to use UA-xxx adapter tips *

Audiovox

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
PVS3393, PVS6360, PVS72901	PA-L5F	PA-L5F	PA-L5F	n/a	n/a

Coby

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
TF-DVD500	PA-L40	PA-L40	PA-L40	n/a	n/a
TF-DVD1020, TF-DVD1021, TF-DVD1023, TF-DVD1080	PA-L40	PA-L40	PA-L40	n/a	n/a
TF-DVD5605	PA-L40	PA-L40	PA-L40	n/a	n/a
TF-DVD7005, TF-DVD7006, TF-DVD7050, TF-DVD7051	PA-L40	PA-L40	PA-L40	n/a	n/a
TF-DVD7107, TF-DVD7307, TF-DVD7333	PA-L40	PA-L40	PA-L40	n/a	n/a
TF-DVD8187, TF-DVD8503	PA-L40	PA-L40	PA-L40	n/a	n/a

Initial

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
IDM-700, IDM-750DX, IDM-830, IDM-831, IDM-831B, IDM-835, IDM-850, IDM-850B	PA-L40	PA-L40	PA-L40	n/a	n/a
IDM-1210, IDM-1250, IDM-1250B, IDM-1252, IDM-1731, IDM-1880	PA-L40	PA-L40	PA-L40	n/a	n/a
IDM-5110, IDM-5820, IDM-7058, IDM-7110, IDM-9520, IDM-9530	PA-L40	PA-L40	PA-L40	n/a	n/a

Insignia

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
NS-PDVD8	PA-L40	PA-L40	PA-L40	n/a	n/a

LG

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
DP781	PA-L40	PA-L40	PA-L40	n/a	n/a

Memorex

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
MVDP1102	PA-L40	PA-L40	PA-L40	n/a	n/a

Panasonic

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
DVD-L10, DVD-L50	PA-L55	PA-L55	PA-L55	n/a	n/a
DVD-LA85, DVD-LA95	PA-L55	PA-L55	PA-L55	n/a	n/a
DVD-LS5, DVD-LS50, DVD-LS55, DVD-LS80, DVD-LS82, DVD-LS850, DVD-LS90, DVD-LS91	PA-L55	PA-L55	PA-L55	n/a	n/a
DVD-LV50, DVD-LV55, DVD-LV57, DVD-LV60, DVD-LV65, DVD-LV70, DVD-LV75	PA-L55	PA-L55	PA-L55	n/a	n/a
DVD-LX110, DVD-LX8, DVD-LX9, DVD-LX97	PA-L55	PA-L55	PA-L55	n/a	n/a
DVD-P10	PA-L55	PA-L55	PA-L55	n/a	n/a
DVD-PA65	PA-L55	PA-L55	PA-L55	n/a	n/a
DVD-PV40, DVD-PA55	PA-L55	PA-L55	PA-L55	n/a	n/a

Philips

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
DCP750, DCP752, DCP850, DCP951	PA-L40	PA-L40	PA-L40	n/a	n/a
PET320, PET702, PET708, PET724, PET805, PET824, PET1002, PET1030	PA-L40	PA-L40	PA-L40	n/a	n/a

Polaroid

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
DPA-00710S	PA-L40	PA-L40	PA-L40	n/a	n/a
DPA-07041S, DPA-07042S, DPA-07043B, DPA-07046P, DPA-07046Q, DPA-07051B	PA-L40	PA-L40	PA-L40	n/a	n/a
DPA-08040B, DPA-08540K	PA-L40	PA-L40	PA-L40	n/a	n/a
DPA-10040K	PA-L40	PA-L40	PA-L40	n/a	n/a
PDM-0082, PDM-0084, PDM-0085, PDM-2727, PDM-2737	PA-L40	PA-L40	PA-L40	n/a	n/a
PDV-0713A, PDV-0713B	PA-L40	PA-L40	PA-L40	n/a	n/a
PDX-0073	PA-L40	PA-L40	PA-L40	n/a	n/a

Sony

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
DVP-FX700 DVP-FX705	PA-L40	PA-L40	PA-L40	n/a	n/a
DVP-FX810, DVP-FX810/P, DVP-FX810/R	PA-L40	PA-L40	PA-L40	n/a	n/a

Toshiba

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
SD-P1000, SD-P1200, SD-P1400, SD-P1500	PA-L55	PA-L55	PA-L55	n/a	n/a
SD-P1600, SD-P1700, SD-P1800, SD-P1850, SD-P1900	PA-L55	PA-L55	PA-L55	n/a	n/a
SD-P2000, SD-P2500, SD-P2600, SD-P2700, SD-P2800	PA-L55	PA-L55	PA-L55	n/a	n/a
SD-P5000	PA-L55	PA-L55	PA-L55	n/a	n/a

TruTech

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
PVS12701	PA-L5F	PA-L5F	PA-L5F	n/a	n/a

Zenith

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
DVP615	PA-L40	PA-L40	PA-L40	n/a	n/a