

MP3 and Portable Media Players

Green Text with Light Green Background indicates the adapter tip is included with product.

Red Text with Clear Background indicates the adapter tip is sold separately.

N/A indicates that the adapter is not available or the product is not compatible.

*MP3450i R2 requires PA-L34 or PA-S34 (not included in original package) to use UA-xxx adapter tips *

Apple

Model	MP3450	MP3450 R2	MP3450i R2*	MP3750	MP3750 R2	Additional Info
1G iPod, 2G iPod, 3G iPod	PA-1394	PA-1394	PA-1394	PA-1394	PA-1394	
iPod mini, 4G iPod, iPod photo, 5G iPod	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	
iPod shuffle, iPod shuffle 2G	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	
iPod classic 80G/120G/160G	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	
nano, nano 2G, nano 3G, nano 4G, nano 5G, nano 6G	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	
iPod touch, iPod touch 2G, iPod touch 3G	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	
iPhone, iPhone 3G, iPhone 3G S, iPhone 4	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	iPod USB Cable	**MP3300-16 can be used to charge through DC Out port at 1A (MP3450, MP3450i only)
iPad	PA-USB2	iPod USB Cable	iPod USB Cable	PA-USB2	iPod USB Cable	**MP3300-16 can be used to charge through DC Out port at 2.1A (MP3450, MP3450i only)

Archos

Model	MP3450	MP3450 R2	MP3450i R2	MP3750	MP3750 R2	Additional Info
Archos: 104, 105, 204	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	
Archos: 404, 404 Camcorder, 405, 504	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	
Archos: 604, 604 WiFi, 605 WiFi	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	
Archos 5, 7	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	
Archos Vision: 10b, 14, 15, 15b, 18, 18b, 18c, 18d	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	
Archos Vision: 20b, 20c, 20d, 24, 24b, 24c, 24d	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	
Archos Vision: 3, 3cam, 30c, 35, 43, 50b	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	
Archos Vision: clipper	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	Archos USB Cable	

Creative

Model	MP3450	MP3450 R2	MP3450i R2	MP3750	MP3750 R2	Additional Info
ZEN Micro, ZEN MicroPhoto	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	

Microsoft

Model	MP3450	MP3450 R2	MP3450i R2	MP3750	MP3750 R2	Additional Info
Zune: 4GB, 8GB, 30GB, 80GB	Microsoft USB Cable	Microsoft USB Cable	Microsoft USB Cable	Microsoft USB Cable	Microsoft USB Cable	

Pioneer

Model	MP3450	MP3450 R2	MP3450i R2	MP3750	MP3750 R2	Additional Info
Pioneer Inno XM radio	PA-L30	PA-L30	PA-L30	PA-L30	PA-L30	

SanDisk

Model	MP3450	MP3450 R2	MP3450i R2	MP3750	MP3750 R2	Additional Info
Sansa: c200, e200	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	
Sansa: Connect, Fuze, View	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03	