

MP3 and Portable Media Players

Green Text with Light Green Background indicates the adapter tip is included with Product.

Red Text with Clear Background indicates the adapter tip is sold separately.

N/A indicates that the adapter is not available or the Product is not compatible.

* MP3450i requires PA-L34 or PA-S34 (not included in original package) to use UA-xxx adapter tips *

Apple

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
1G iPod, 2G iPod, 3G iPod	PA-1394	PA-1394	PA-1394	PA-1394	PA-1394
iPod mini, 4G iPod, iPod photo, iPod nano, 5G iPod, 2G nano	UA-USB	iPod USB	UA-USB	iPod USB	iPod USB
iPod shuffle, iPod shuffle 2G	UA-USB	iPod USB	UA-USB	iPod USB	iPod USB
iPod classic 80G/120G/160G, nano 3G, nano 4G	n/a	iPod USB	n/a	iPod USB	iPod USB
iPod touch, iPod touch 2G, iPhone, iPhone 3G, iPhone 3G S	n/a	iPod USB	n/a	iPod USB	iPod USB

Archos

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
Archos: 104, 105, 204	UA-USB	Archos USB	UA-USB	Archos USB	Archos USB
Archos: 404, 404 Camcorder, 405, 504	UA-USB	Archos USB	UA-USB	Archos USB	Archos USB
Archos: 604, 604 WiFi, 605 WiFi	UA-USB	Archos USB	UA-USB	Archos USB	Archos USB

Creative

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
ZEN Micro, ZEN MicroPhoto	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03

Microsoft

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
Zune: 4GB, 8GB, 30GB, 80GB	UA-USB	Microsoft USB	UA-USB	Microsoft USB	Microsoft USB

Pioneer

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
Pioneer Inno XM radio	PA-L30	PA-L30	PA-L30	PA-L30	PA-L30

SanDisk

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
Sansa: c200, e200	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
Sansa: Connect, Fuze, View	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03