

## PDA, GPS and Handheld Games

Green Text with Light Green Background indicates the adapter tip is included with Product.

Red Text with Clear Background indicates the adapter tip is sold separately.

N/A indicates that the adapter is not available or the Product is not compatible.

\* MP3450i requires PA-L34 or PA-S34 (not included in original package) to use UA-xxx adapter tips \*

### Casio

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
IT-10	PA-L40	PA-L40	PA-L40	UA-L40	UA-L40

### Garmin

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
Edge: 605, 705	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04
nuvi: 200, 200W, 205, 205W, 250, 250W, 255, 255W, 260, 270	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04
nuvi: 300, 310, 350, 360, 370	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04
nuvi: 610, 650, 660, 670, 680	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04
nuvi: 710, 750, 760, 770, 780	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04
nuvi: 850, 880	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04
StreetPilot: i2, i3, i5	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04

### HTC

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
P3300, P3470, P3600, P4350, P6300, P6500	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
S310, S620, S710, S730	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
Tytan II	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03

### Navigon

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
Navigon 5100	UA-U04	UA-U04	UA-U04	UA-U04	UA-U04

### Nintendo

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
DS, Gameboy Advanced, Gameboy SP	UA-NIN1	UA-NIN1	UA-NIN1	UA-NIN1	UA-NIN1
DS Lite	UA-NIN3	UA-NIN3	UA-NIN3	UA-NIN3	UA-NIN3

### Palm

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
m125, m130, m500, m505, m515	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1
LifeDrive	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2
Tungsten C	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1
Tungsten E2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2
Tungsten T, Tungsten T2, Tungsten T3	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1
Tungsten T5	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2
Tungsten W	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1
TX	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2	UA-PALM2
Zire 71	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1	UA-PALM1

### Sony

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
PSP	PA-L40	PA-L40	PA-L40	UA-L40	UA-L40

### TomTom

Model	MP3300	MP3450	MP3450i	MP3700	MP3750
GO: 520, 720, 730	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
GO: 920, 930, 930 T	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
XL, XL S, XL 30, XL 330, XL 330 S	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03
ONE: 2nd Edition, 30 Series, 3rd Edition	UA-U03	UA-U03	UA-U03	UA-U03	UA-U03